
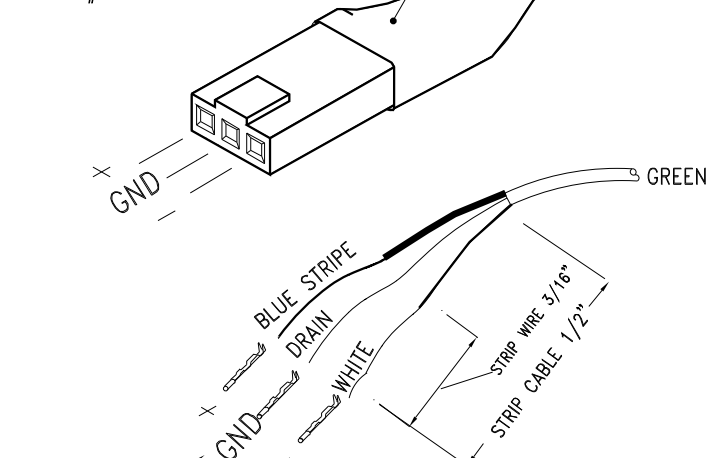


4 | 3 | 2 | 1

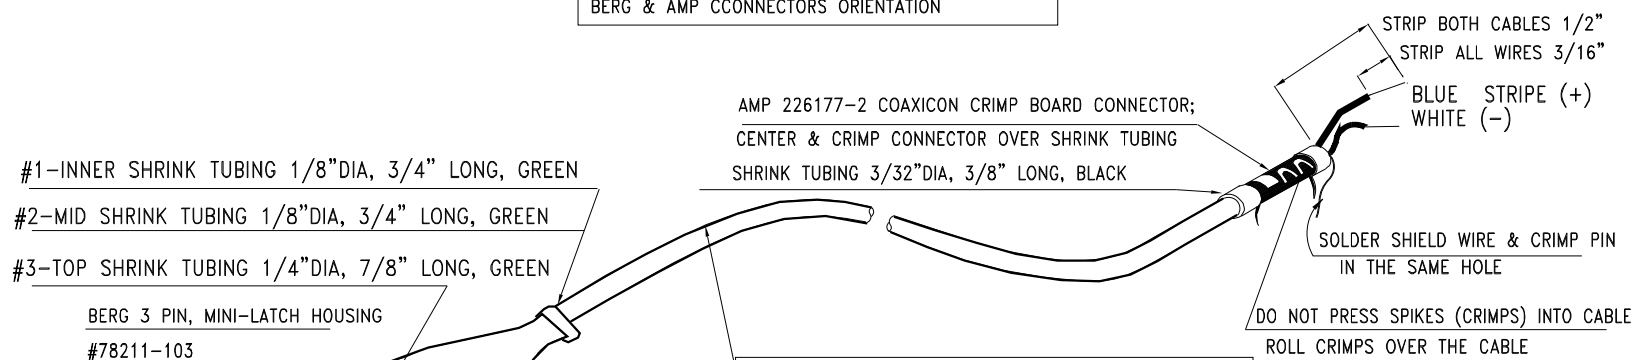

BERG PINS
47745-000

NOTES FOR BERG CONNECTOR END

1. PUSH INNER & MID SHRINK TUBING AS CLOSE AS POSSIBLE TO BERG CONNECTOR
2. ALWAYS START HEATING SHRINK TUBING AT THE END CLOSE TO THE BERG CONN.

NOTES FOR AMP CONNECTOR END

1. STRAIGHTEN AMP CONN. SPIKES (CRIMPS) BEFORE CRIMPING
2. BEND AMP CONN. PINS PERPENDICULAR TO CABLE JUST BEFORE SOLDERING THEM INTO THE BOARD

| ITEM NO. | MATERIAL | DESCRIPTION | QTY. |
|---|----------|---|--|
| | | THE UNIVERSITY OF CHICAGO HIGH ENERGY PHYSICS 5640 SOUTH ELLIS AVE. CHICAGO IL 60637 | |
| TOL'S ON OPEN DIM'S DEC. ± FRAC ± ANGLES ± | | DESIGNED | |
| DRAWN ELIZABETH POD | | APPROVED | |
| DATE 10-4-99 | | TITLE ATLAS TILE CALORIMETER 3IN1 CARD & CABLES, VERSION 3.2, ISOMETRIC VIEW SHIELDED-PAIR CABLE, TRIGGER | |
| REFERENCES | | SCALE NO SCALE | RELEASED DATE |
| MATERIAL | | SIZE B | SHEET PROJECT DWG. NO. ATLAS-A-1432-04 |
| SAVES AS: ATLAS99/3in1cable-ps02.dwg | | | REV B |

B

A

A

2

1